

OUTDOOR PRICE SET WAND USER MANUAL



**BELLATRIX
SYSTEMS**

Newspaper prices are stored electronically in the Coin Wizard's memory. New prices can be programmed into the Coin Wizard by using a Bellatrix PRICE SET WAND or PROGRAMMABLE PRICE SET WAND. The Price Set Wand is preprogrammed at the factory with the required prices. The Programmable Price Set Wand is set on-site by the customer.

USING THE PRICE SET WAND TO SET PRICES:

1. Unplug the keyswitch cable from the 6-pin connector on the coin reader.
2. The Coin Wizard should be in the upright position like it would be in the newsrack.
3. Connect the cable from the PRICE SET WAND to the 6-pin connector on the Coin Wizard. The connector is keyed so that it cannot be put in upside down.
4. Check that the cable is connected properly to the PRICE SET WAND.
5. Reset the Coin Wizard by pressing the blue reset button. Older ST-110 Coin Wizards will have two solder pads above C10 on the circuit board that should be shorted together to reset.
6. Press the green "Program" button on the front of the Price Set Wand. When programming is successful, the green "Price Set" light will flash and the wand will beep once. (If the wand beeps continually, communication was not successful. Check connections and try again.) When finished programming, disconnect the Price Set Wand and plug the keyswitch cable back into the Coin Wizard.

If the wand emits a series of short beeps and the green light does not come on, the programming was NOT successful.

1. Recheck the cable connections.
2. Reset the Coin Wizard
3. Wait for 10 seconds and then repeat steps 4-6

LOW BATTERY LIGHT:

The Low Battery light is located in the upper left corner of the programmable Price Set Wand. When the Low Battery light is ON (indicated by a red light), then you will need to replace the battery in the wand. To do this, simply remove the battery cover on the back of the wand, and replace the old battery with another **9V battery**. Replace the battery cover and check to make sure that the Low Battery light is no longer ON.

To program the ST-511, the included adapter cable must be attached to the 6-pin connector of the Price Set Wand. **(Figures 1 and 2)**



Figure 1

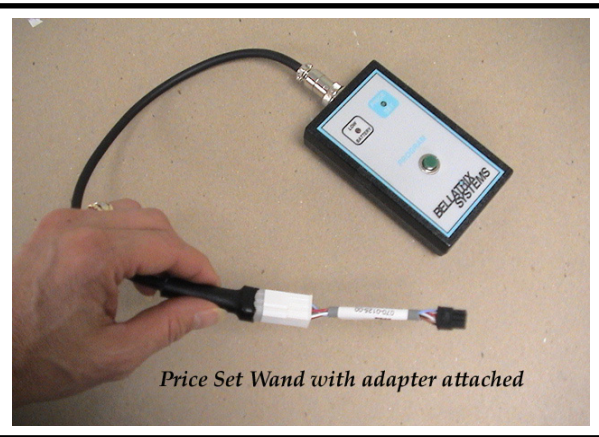


Figure 2

Using the red Cam Lock key, unlock and open the cabinet top. **(Figure 3)** Using a Phillips screwdriver, remove the 2 screws from the Front Access Panel. **(Figure 4)** Fold down the Front Access Panel to expose the keyswitch cable.



Figure 3

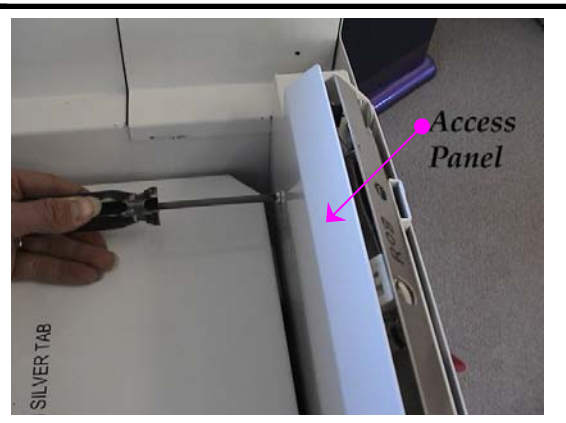


Figure 4

Disconnect the 6-pin keyswitch connector from the Impact cable. **(Figure 5)** Plug the Price Set Wand adapter cable into the 6-pin connector on the Impact Cable. **(Figure 6)** You will be able to hear the Coin Wizard reset itself in preparation for programming.

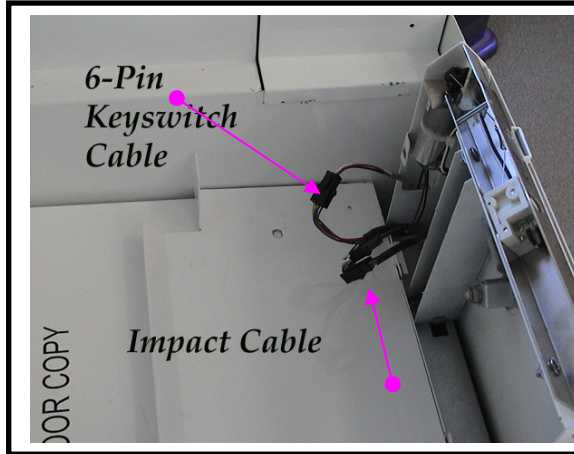


Figure 5

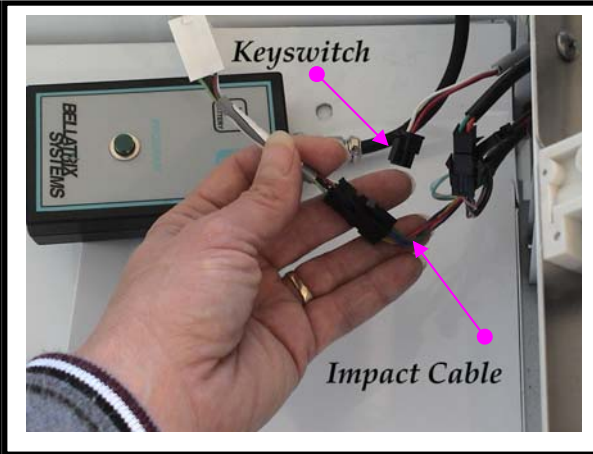


Figure 6

Press the green “Program” button on the front of the Price Set Wand. **(Figure 7)** When programming is successful, the green “Price Set” light will flash and the wand will beep once. (If the wand beeps continually, communication was not successful. Check connections and try again.) When finished programming, disconnect the Price Set Wand and plug the keyswitch cable back into the Impact cable. Close the Access Door and cabinet top.



Figure 7