



# Technical Bulletin #15

## IMPACT Newsrack

### Topic: Securing The Coin Wizard Mechanism

Tools needed:

- 5.5mm Stubby Nut Driver

Secure the Coin Wizard as follows:


- Fully open the Cabinet Top (using the Cam Lock key).
- Remove the screws from the front Lock Access Panel.
- Flip the Coin Wizard Access Cover open and remove it by pushing it back and lifting it out.
- Inspect the nut on the Guide Pin that holds the top of the Coin Wizard in place.

**IMPORTANT:** If the nut on the Guide Pin is already snug enough to hold the Coin Wizard firmly in place, then there is nothing more to do—simply close the Coin Wizard Access Cover, close the Cabinet Top and you are done. Otherwise, continue with the steps below.

- Detach the 12-pin connector on the Lock/Coin Wizard Cable from the connector on the Coin Wizard.
- Slide the Coin Wizard up and out of the Rack. The bottom of the Coin Wizard is held behind a metal tab. A Guide Pin that fits into a slot on the Coin Wizard holds the top of the Coin Wizard.
- Tighten the nut on the Guide Pin until there is just enough clearance for the width of the Coin Wizard metal plate (i.e. just snug enough to hold the Coin Wizard firmly in place).
- Slide the Coin Wizard into position (on the top right of the Rack, behind the coin slot). The bottom of the Coin Wizard is held behind a metal tab. A Guide Pin that fits into a slot on the Coin Wizard holds the top of the Coin Wizard.

**IMPORTANT:** The bottom of the Coin Wizard must be held behind a metal tab on the Rack and the top of the Coin Wizard must be held by a Guide Pin on the Rack that fits into a slot on the Coin Wizard.

- Verify that the nut on the Guide Pin is snug enough to hold the Coin Wizard firmly in place. If it is not, repeat the steps to remove the Coin Wizard, tighten the nut and replace the Coin Wizard.
- Attach the 12-pin connector on the Lock/Coin Wizard Cable to the 12-pin connector on the Coin Wizard (be sure the connector snaps into place).
- Press the blue Reset Button on the Coin Wizard and verify that the Rack's Door-Lock opens—as indicated by the movement of the Lock Assembly's internal Coin Wizard.
- Re-install the Coin Wizard Access Cover by inserting it in place, sliding it forward and closing it..
- Be sure the Cam Lock is in the fully unlocked position and close the Cabinet Top.

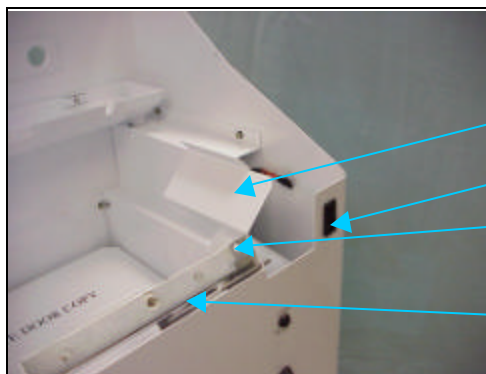

Coin Wizard Access Panel

Coin Slot

Lock/Mech Cable's  
12-pin Connector

Lock Assembly

Page 1 of 2




# Technical Bulletin #15

## IMPACT Newsrack

### Topic: Securing The Coin Wizard Mechanism



**Tightening The Guide Pin Nut**

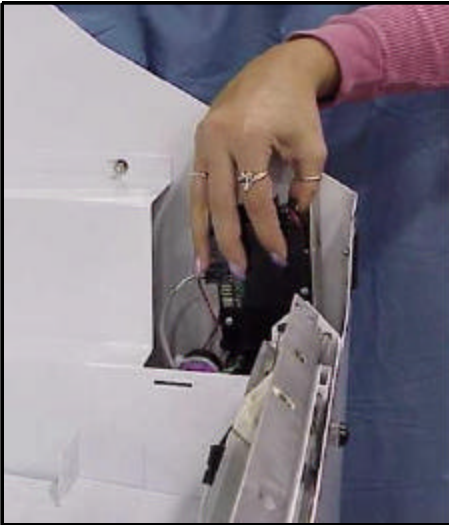

**Inserting The Coin Wizard (Top)**



**Inserting The Coin Wizard (Bottom)**